

Ultimate Car Shield/Bike Shield



What's in the Box

Big Box: Ultimate Car/Bike Shield

Small Box: Accessories (see picture below)

- Air Pump, Air Hose, Deflation Nozzle, Maintenance Nozzle
- Pressure Tube & Pressure Adaptor
- Fans, Panel, AC Adaptor & Plug
- Fan Cover Support (Outdoor version only)
- Air Filters & spare material



For further information on care and warranty: www.inthegarage.com/instructions

WARNINGS




1. Do not overinflate or interfere with the pressure settings which are pre-set from the factory
2. Should the Air Pump run for over 30 minutes, switch it off. There is a risk of pump overheating/burn out/fire.
3. Risk of suffocation/asphyxiation if persons are inside the device– do not leave children unattended. Do not leave your vehicle running in the device
4. Do not use “Indoor Ultimate Car Shield/Bike Shield” outdoors
5. Outdoor Ultimate Car Shield/Bike Shields. ATTENTION: High risk of damage to property or persons if not properly secured.
 - a. Needs to be always sufficiently fastened to the ground to all eight anchor points with anchoring that can withstand a force of 1600 Newtons (N), which is the equivalent of 163 kg. (359lbs) for each anchor point. There are 8 bottom and 8 top D-rings that can be used to connect to
 - b. Do not use above a wind speed of 35km/h (20mph). Deflate the device and store in a protected area
 - c. Zipper runners should be fastened together
 - d. Do not keep the device inflated without a vehicle inside
 - e. Snow accumulation above 20cm (8 inches) should be removed promptly to avoid the device to sag or collapse

Instructions

Note: It should take about 20 minutes to set up the Ultimate Car Shield/Ultimate Bike Shield once unpacked. We recommend two people.

Only products marked "Outdoor" are for use outdoors. All other products are for indoor use only!

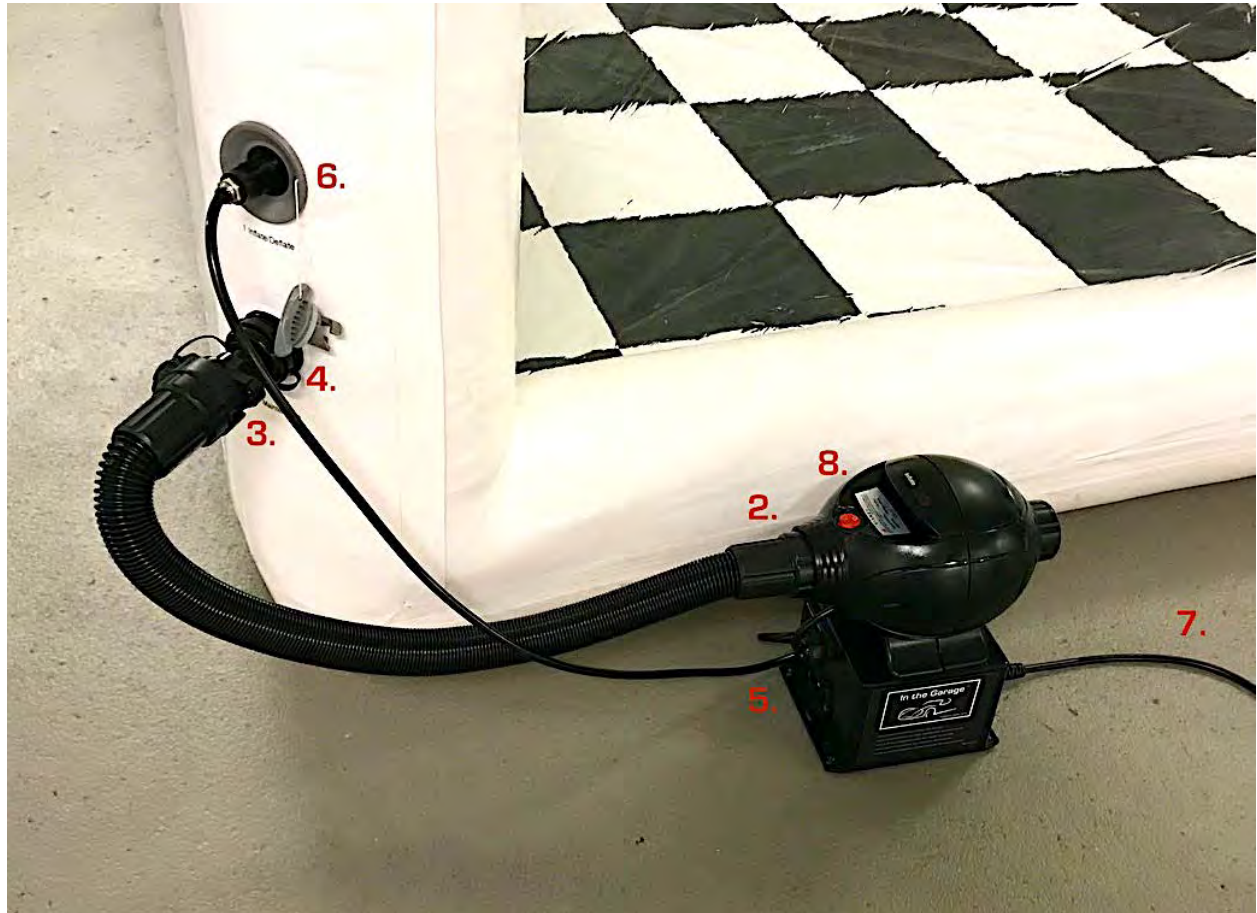

1. Unfold the Ultimate Car/Bike Shield and place it where it will be located when inflated
2. Connect one end of the **Air Hose** to the Inflate Side of the **Air Pump**
3. Insert the **Maintenance Nozzle** to the other end of the **Air Hose**
4. Place the **Maintenance Nozzle** in the lower **(2) Maintenance Valve** on the Ultimate Car/Bike Shield by turning the nozzle thread clockwise until tight
5. Insert the **Pressure Adapter** to the port marked "Pressure Tube" on the **Air Pump**

6. Insert the **Pressure Adapter** into the upper **(1) Inflate/Deflate Valve** on the Ultimate Car/Bike Shield. Turn clockwise until it “clicks” into place. **Ensure all is snugly closed.**
7. Connect the electric cable to the **Air Pump** and plug it into an appropriate electrical outlet. For the Outdoor version, ensure that the power adapter and pump are placed **inside** the Ultimate Car Shield.
8. Turn on the **Air Pump** using the red 0/1 switch. It will run for less than 5 minutes or until the optimal pressure is reached and will maintain that pressure without intervention

Notes:

- *This system allows constant maintenance without any user intervention in the event of pressure drops common to all inflatable products*
- *You may need to assist the device by lifting the pillars during inflation to ensure a smooth rise. If it is not fully inflated at five minutes, turn off the pump and unfold any portions which may be blocked or stuck together*
- *For the indoor versions, you can choose to locate the Air Pump inside or outside the Ultimate Car/Bike Shield as there are two sets of identical valves. The Air Pump and adapter must be inside for the Outdoor version*

WARNING! Do not overinflate or interfere with factory-set the pressure settings. Maximum inflation: 2.56PSI/0.17 Bar for Ultimate Car Shield & 1.91PSI/0.13 Bar for Ultimate Bike Shield



9. Install the **Fans** by placing the Velcro panel on the inside of the Ultimate Car/Bike Shield. Press hard



10. With the **AC Adapter** outside the device, run the power wire through the purpose-made slit and connect to **Fan**. (do not plug in an electrical socket yet as you first need to install the **Filter**)
11. From the outside of the Ultimate Car/Bike Shield, place the **Filter** in the round opening by gently bending the edges to make it fit. There is a specially-made slit in between the inside and outside panels

Tip: It is easier if you rotate the filter while installing



12. Snap on the corresponding plug Adapter for your region onto the **AC Adapter**
13. Plug the **AC Adapter** in an appropriate electrical power socket
14. Outdoor version: Install the **Fan Cover Support** inside the hood above the fans
15. **ATTENTION:** Outdoor version: Anchor the device to the ground (refer to **Warnings & Care** for more information)
16. Close all zippers to allow the air to circulate properly

Note: when new, you may experience some “sticky” zippers. Do not force them. We recommend using two hands to open/close zippers (one inside and one outside). Also, it is easier to close zippers when the Fans are not running.



Deflation

1. Unscrew the cover inserted in the side marked "Deflate" from the pump
2. Connect one end of the **Air Hose** to the Deflate Side of the **Air Pump**. Remove the **Maintenance Nozzle** and replace it with the **Deflation Nozzle**.
3. Disconnect the **Pressure Adapter** from the upper valve marked “[1] Inflate/Deflate” on the Ultimate Car/Bike Shield
4. Insert the **Deflation Nozzle** in the upper valve marked “[1] Inflate/Deflate”
5. Turn on the **Air Pump** with the red 0/1 button and the Ultimate Car/Bike Shield will deflate in less than five minutes. You can eventually help by pressing the inner tab of the upper valve “[1] Inflate / Deflate”

N.B.:

- *You may need to assist the device by lifting the pillars during deflation*
- *If it is not fully deflated at five minutes, turn off the pump and unfold any portions which may be “stuck”*



CARE / TROUBLESHOOTING

1. Use gentle soap and water to clean the PVC
2. Avoid contact between hot vehicle exhaust and PVC
3. Holes can be repaired using the patches supplied together with adhesive (i.e. TEAR-AID Type B)
4. Wash the charcoal filter with soap and water regularly (approx. every 6 months) depending on local region / air quality
5. It is recommended to protect the device with a protective material (i.e. foam or rubber layer) underneath and/or on top of the floor to avoid punctures from pebbles and other sharp objects
6. If your device is subjected to sea or ocean air, we recommend washing it regularly
7. If the pump stops working:
 - a. Check the fuse located behind the small flap below the power plug on the pump box
 - b. Check all connections: power cord, hoses, pressure adapter, pressure tube on the air pump
8. If the pump turns on more than usual:
 - c. Look for leaks using a liquid spray bottle filled with water and soap. Spray the suspected area and look for bubbles. To repair any leak, use the patches supplied together with adhesive (i.e. TEAR-AID Type B)

Check all the 4 valves (both inside and out). Make sure they are tight. There are two grey valves (one in and one out). Unscrew the cap, check the spring. It should be out all the way. Rotating and pushing you can lock it open or closed. Make sure it is closed (i.e. fully extended) and no air is leaking.

For the black valves, check that they are both fully screwed on. It is a two piece system. Pay attention to the inner larger part